



**USER MANUAL**  
**Wireless Speaker**  
**LPS-M400**

Hello!

Please carefully read this Manual before using this Product for the very first time and well keep it for further reference.

**Dear Link Tech User,**

**Thank you for choosing Link Tech product. Your choice is crucial for us,which means Link Tech has added a new user. Hope that we will bring you a good expeience through our products and services. Also hope you will put forward the good advice and suggestions by official customer hotline, Whatsapp and Bip in the process of product experience,which can help Link Tech to constantly improve product and service.**

**If you encounter any problems in the using product, please refer to service process. Your support is our strongest power, also your recognition and evaluation are a great encouragement to Link Tech. Thank you!**

**Link Tech sales team**

# Portable Wireless Speaker

## LPS-M400



## Technical Specifications:

Wireless standard: 5.0

Transmission distance: 10 meters

Output power: 10W2-35W

Play time: 4H

Frequency effect: 100Hz - 10KHz

Speaker: 66mm 2,40 10W, 115mm, 40 35W

Input Power: 5V ==-1A

Maximum current consumption: 1A



Battery type: 18650 Li-ion 6000mAh

Audio signal input interface:

standard 3.5mm headphone jack (stereo)

## Features:

1. Wireless connection
2. Memory function
3. Support U disk/ TF card/ AUX play mode
4. Built-in lithium battery
5. Support MP3/WAV/WMA/FLAC/APE music format decoding
6. Use high-fidelity speakers, make the sound more natural and delicate
7. Water resistance IPX6
8. Mobile power function: 5V, 1A
9. Equipped with microphone, switch to connect speakers

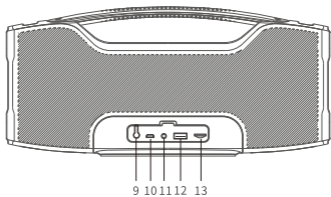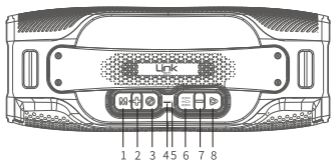

## Button instruction:

1. Model button: short press switch function.

2. Volume+

short press the volume increase; long press the next song.

3. Power button

long press turn on/off for about 3 seconds/times.

4. Battery level indicator.

5. Wireless indicator.

6. EQ button:

Short press to change the music playing environment mode(indoor, outdoor, Karaoke...)

7. Volume

short press to reduce the volume, long press the previous song.

8. Play/Pause button

short press: play/pause, long press exit wireless connect.

9. Reset button.

10. DC 5V interface.

when inserted into the DC 5V data cable defaults to charging the device.

11. AUX interface.

12. USB interface.

when inserted into the U disk, the default U disk playback.

Charging mobile devices by default when connecting to mobile devices.

13. TF card interface

when inserted TF card default TF card playback.

## Directions for use:

### 1. Device to connect

1.1 Turn on the device to default wireless mode.

1.2 Turn on wireless device, search model Link-M400

Pro and connect, play music after connection successfully.

2. Suitable for all kinds of mobile phones equipped with wireless technology, wireless adapter, wireless players.

### 3. Voice prompt

3.1 there is a voice prompt when turn on/off.

3.2 Low-power voice prompt 3 times, shutdown after 15S;no charge state.

### 4. Mode switching.

4.1 enter into wireless by default when starting up, switching sequence is as follows:

wireless mode-TF card mode-USB mode - AUX mode.

4.2 mode: post-insertion priority.

### 5. LED light

#### 5.1 Battery level indicator:

#### Charging

Battery level	LED1	LED2	LED3	LED4
1%~25%	Flicker	Light off	Light off	Light off
26%~50%	Light	Flicker	Light off	Light off
51%~75%	Light	Light	Flicker	Light off
76%~100%	Light	Light	Light	Flicker
Full power	Light	Light	Light	Light

#### Playing

Battery level	LED1	LED2	LED3	LED4
1%~25%	Light	Light off	Light off	Light off
26%~50%	Light	Light	Light off	Light off
51%~75%	Light	Light	Light	Light off
76%~100%	Light	Light	Light	Light

## 5.2 indicator:

**Wireless search status:** the white light flashes quickly, about 0.5 seconds/time; **Wireless pairing status:** white light is always on.

**Play status:** The white light flashes slowly for about 1.5 seconds/time;

## 6. Volume

the default volume of speaker is 70% when starting-up.

**7. Charging to use** The machine built overcharge protection circuit, can be connected to a computer or charger for a long time, about four hours to fully charge. Every battery playback time will be different due to the use of different size of the volume.

**8. No working status, automatic shutdown after 15 minutes.**

## Troubleshooting:

1. Auto power off the battery protection is automatically activated when the battery is low, please use it after charging for 5 hours.

2. Can not play music: the music file storage path cannot be recognized, save file and store in the root directory of the removable device.

3. Connect the computer no sound: computer interface connection error, please select the correct audio output port.

4. No function or function keys wrong: try again after shutdown.

5. If the machine appears abnormal, short press the reset button to reset.